



Basketball Double Shot Instructions

**DO NOT CLIMB OR LEAN ON THE FRAME OR IN THE RAMP.
SERIOUS INJURY COULD OCCUR.**

1. When a player makes a basket the cycle will begin and a music tune will play. The first shot starts the game but no shots are scored until the music tune stops. Between consecutive games the music does not play.
2. The score keeper should turn on after a shot is made by one player with the display showing 00
3. The timer will then reset to 30 seconds and begin counting down.
4. A beep will sound when a basket is made.
5. When time counts down to zero the buzzer then sounds and the score display is retained for each player.
6. After a 6 second time delay the scores clear for both players.

Troubleshooting

- No display or sound when a shot is made.
Batteries are not installed properly or the batteries are dead.
- Display but no sound
Volume control tuned all the way down.
- The ball passes through the basket and a point is not scored.
Bad switch connection.
- The score keeper resets during play
Weak batteries.
Throwing the ball excessively hard against the backboard can jar batteries loose.
- Players receive static shock from the unit during play.
- Static electricity build-up on the ball due to extremely dry atmospheric conditions.
- “LO bA” appears
Weak batteries.