



Spin Art Instructions

426 Stump Road
Montgomeryville, PA 18936
Tel: 215.646.6777
Fax: 215.646.5576
www.AtoZPartyRental.net

ONLY WATER BASED PAINTS ARE PERMITTED TO BE USED WITH THE MACHINE.

CONTROLS & THEIR FUNCTION

On the rear panel near the power cord is the main power ON/OFF switch. A second switch is activated with the lid is in the down position. During normal operation the main power switch should be in the ON position. Opening and closing the lid will start or stop the paper tray spinning.

CAUTION: Remember to turn the main power switch to OFF before unplugging the machine.

CREATING ARTWORK

Before turning the main power switch ON, place one of the corrugated liners around the inside of the bowl. This will absorb most of the excess paint and minimize clean up at the end of the day.

The artwork may be created in one of two ways:

1. Place the 5x7 card stock in the paper tray being sure the edges of the paper are within the tray edges. Squeeze small drops or lines of paint on to the card stock. Multiple colors of paint may be used and are recommended for the best pictures. Close lid of the machine to start the tray spinning. Raise the lid after a few seconds to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

2. Place the 5x7 card stock in the paper tray being sure the edges of the paper are within the tray edges. Squeeze small drops or lines of paint on to the card stock. Close lid of the machine to start the tray spinning. Squeeze a few drops of paint through the slot in the lid onto the card stock. Multiple colors of paint may be used and are recommended for the best pictures. Raise the lid after a few seconds to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

CLEANING

With a soft, damp cloth use soap and water to remove the water based paint. DO NOT submerge the machine in water.