

120v Electric Convection Oven


1. INSTRUCTIONS FOR THE OPERATOR

You will find important information about maintaining and operating your new oven in this manual. Please read the manual and become familiar with your new oven before you begin to operate it. Keep the manual in a safe place and make sure everyone reads it before operating the oven. Please use only Cadco authorized service centers and always require quality UNOX-OEM parts. Failure to comply with these standards can compromise safety and will void your warranty.

2. NOTES FOR USE

- **These are medium duty ovens. They are not designed for continuous operating temperature of 475-500° F.**
We recommend Cadco XAF/XAFT series heavy duty ovens for this range of operation.
- Your Cadco oven was designed to cook food and must be used only for that specific purpose. Any other use may void your warranty. The oven allows you to work between 175°F and 500°F. It is suggested that you allow about 2" between trays for proper air circulation during the cooking process.
Use your Cadco oven for:
 - ♦ Baking all types of bread and pastry, both fresh and frozen.
 - ♦ Cooking any meat, fish, or fowl.
 - ♦ Rethermalizing any cooled or frozen cooked foods.
 - ♦ Cooking (not steaming) any kinds of vegetables.
- Please avoid salting your food products while they are inside the cooking cavity. Salt is very corrosive and may, over time, damage the interior of your oven.

3. CONTROL PANEL

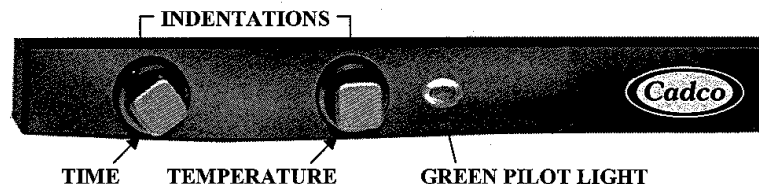

3.1 TIME DIAL

- **To operate your oven for a set time**, you must first turn the time dial **clockwise** to the time you choose, from 0 to 60 minutes (if you're facing the oven, it is the dial on the left side of the control panel). Line up your desired time (on the dial) with the indentation in the control panel above the time dial.
- When set cooking time is over, the dial turns to "0" position, the oven turns off, and a buzzer sounds.
- **To operate the oven continuously** instead of for a set time, turn the time dial **counterclockwise** until the hand icon (☞) on the dial lines up with the indentation in the control panel above the time dial. The oven will operate continuously until you manually turn the dial back to "0".
- Whether you have chosen to set an actual time, or have set the time dial for continuous "on", the fan will begin spinning.

3.2 TEMPERATURE DIAL

- The temperature inside the cooking chamber is set by the temperature dial (if you're facing the oven, it is the dial on the right side of the control panel).
- Turn the dial clockwise and set your desired temperature. At this time the green pilot light, located just to the right of the temperature dial, will turn on. This indicates that the oven is preheating.
- **Please note:** the green pilot light will fluctuate on and off throughout the cooking cycle. This indicates that the heating element is turning on and off to help keep the actual temperature within 5-10 degrees of the set temperature.
- **Always preheat oven before placing food into it.**

