



426 Stump Road
Montgomeryville, PA 18936
Tel: 215.646.6777
Fax: 215.646.5576
www.AtoZPartyRental.net

Speed Cage Assembly

YOU WILL NEED TO SUPPLY STEP LADDERS

1. Select a level area to operate the game with plenty of room to allow for aline to form.
2. Assemble four 12' sections using three 4' lengths and two couplers each.
3. Assemble seven 8' sections using two 4' lengths and one coupler each.
4. Assemble one 8' section using two 4' lengths and one "T" fitting. This section is to be used for the front rightside.
NOTE: Be sure to hand tighten the fittings so they don't slip out during assemble, possibly causing injury.
5. Add a corner piece to both ends of each 12' section.
6. Insert the 8' sections into the remaining two openings of each corner piece. When this is complete, it will create a 12'x8'x8' cube. NOTE: Be sure that the 8' section with the T fitting is on the front right side with the T pointing into the opposite far left corner.
7. Toss the netting over the 12' side, across the top, and pull it down the other side. Adjust it so it is even on both sides.
8. Using bungee ball straps, attach the netting to the bottom 12' sections (the netting will stretch). Also attach the netting to the front left section, the front top section and the front right section.
9. Using the bungee ball straps, attach the back-stop canvas to the back of the unit.
10. Insert the short piece of tubing into the T fitting and attach the radar unit to it.
11. Attach the banner to the front top section.
12. When re-packing the unit, distribute the tubing evenly between the cases (see content tags). Also roll up the netting as tightly as possible.

USE OF SPEED GUN

- Speed Gun operates on two "C" alkaline batteries. To install, remove the battery cover by rotating the battery cap counterclockwise. Insert both batteries positive end first and replaced cap.
- Turn on the Speed Gun by pressing the button underneath the LCD display.
- Aim the Speed Gun at the target and depress the Trigger. Keep your target's direction of travel in a direct line with you and not perpendicular to you.
- Turn off the Speed gun by pressing the button underneath the LCD display for 3 seconds or until display shuts off. After 10 minutes of non-use it will automatically shut off.
- To change the display from MPH to KPH turn on the speed gun. While holding down the trigger press the power button underneath the LCD display. Repeat to switch back to MPH.
- A target can be anything that is moving faster than 10 MPH (16 KPH).
- To acquire the speed of a target, with the Speed Gun powered on, aim the Speed Gun at the target and depress the trigger. A radar icon  will appear in the upper right corner of the LCD display. This indicates the Doppler Radar is functioning. The radar will continue to be active searching for speed until the trigger is released. Upon release of the trigger, the fastest speed captured within that series will automatically be displayed.