


Set up

- Set up a 6' (or longer) table. Place the tablecloth on the table and unfold the game board.
- Open game and connect power cords underneath at hinge.
- Be sure the power cord and the tweezers are plugged into their designated ports on end of game.
- **WHEN FINISHED WITH PLAY, MAKE SURE TO UNPLUG THE POWER CORD AT HINGE BEFORE FOLDING CLOSED.**

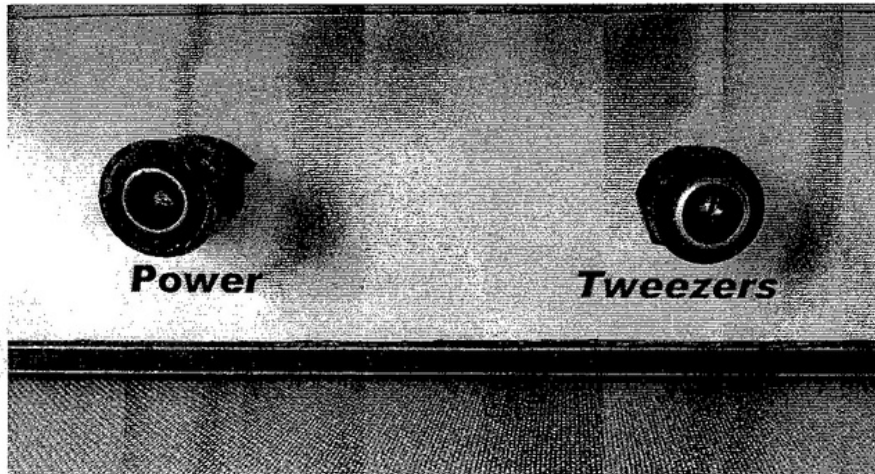

Place the game pieces into their corresponding holes and begin to play. Use the tweezers to carefully remove the various objects without touching the sides of the openings. When a player sets off the sound effects, they pass the tweezers to the next player. The person with the most pieces at the end of the game is the winner.

For faster paced action, use the optional stopwatch.



still partying after

50 YEARS

A to Z
PARTY RENTAL

215-646-6777

Under the **KNIFE**

Instructions

Packing List

<u>DESCRIPTION</u>	<u>QUANTITY</u>
GAME BOARD	1
GAME PIECES (15 per set)	2 sets
GIANT TWEEZERS	1
STOP WATCH	1
TABLE CLOTH	1
TOTE BAG	1
A/C ADAPTER	1

