



426 Stump Road  
Montgomeryville, PA 18936  
Tel: 215.646.6777  
Fax: 215.646.5576  
www.AtoZPartyRental.net

## Inflatable Outdoor Screen



### Setup Instructions:

1. Remove all items from the storage bag.
2. Connect blower to outlet. Use a 10 or 12 gauge extension cord if needed.
3. Position the screen and blower in the location you'd like the screen to be used.
4. Layout down blankets or tarp on the ground first to keep screen clean and avoid damage
5. Unfold and spread out the frame of the movie screen (black fabric)
6. Fix ropes to every buckle and attach to stakes
7. Connect the blower to the inflating tube attached to the frame.
8. Before turning on the blower make sure the deflation zippers are closed
9. Turn on the blower and inflate the screen.
  - If the screen is not inflating check that all zippers are closed and there aren't leaks between the blower and tube.
10. Stake the tethers to the ground. Do not pull the ropes hard.
11. Setup your projector either in front or behind the screen.

### CAUTION:

- DO NOT USE IN THE RAIN
- DO NOT USE IN HIGH WINDS
- BE SURE TO ANCHOR THE SCREEN TO AVOID IT FROM TIPPING OR BLOWING AWAY
- DO NOT FOLD UP THE SCREEN FOR STORAGE IF ANY ITEMS GOT WET

### Removal Instructions:

1. Unzip each vent to allow air to escape.
2. Remove each stake and return to storage bag.
3. If all items are clean and dry, fold up the screen and return it to the storage bag.
4. If any items are wet they must dry before folding for storage/return.
5. If the inflatable tubes or screen are dirty or wet the deposit will not be refunded.