



Deluxe Chuppah Set-Up Instructions

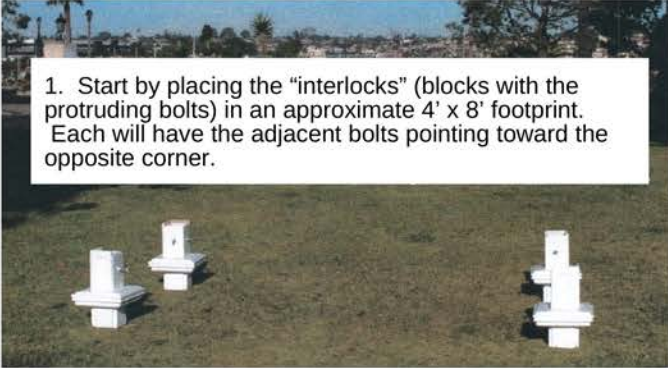

1. Start by placing the "interlocks" (blocks with the protruding bolts) in an approximate 4' x 8' footprint. Each will have the adjacent bolts pointing toward the opposite corner.



2. Next, place the 4' x 8' beams in their respective locations with the open side facing upward. This is where standard floral trays will fit. Please note the "track" on the lower corner of each beam. This will be where the lattice or fabric roof will fit and should face toward the middle area of the "footprint".

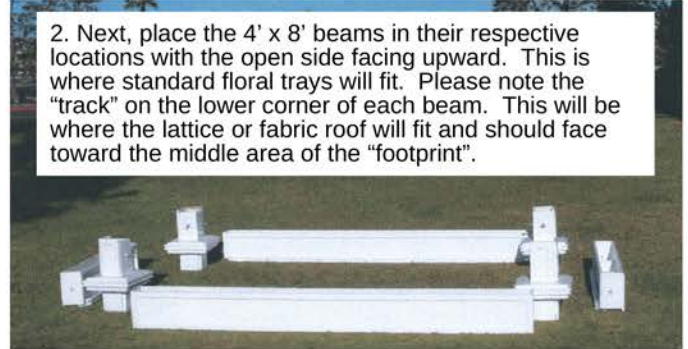


3. Remove one of the wing-nuts and insert the interlock's bolt through the beam end-hole until the beam and interlock touch. You may begin with any beam.




4. Here the beam and interlock are touching but the wing-nut hasn't been completely tightened. This will allow some flexibility when assembling the remaining beams.




5. Connect the remaining beams and tighten the wing-nuts. When all are secure, the roof will be complete and ready for the fabric or lattice.

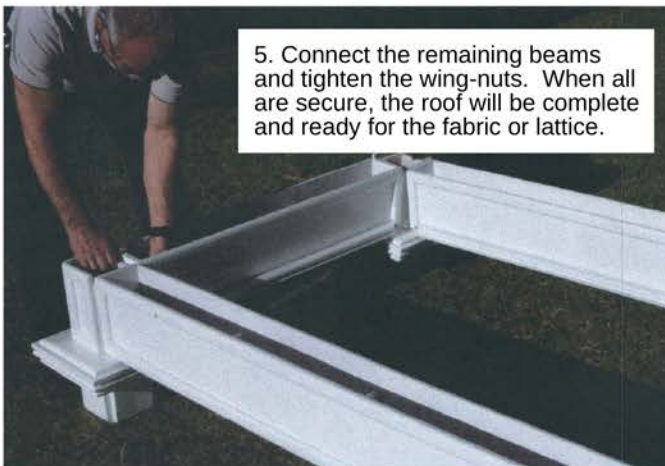

6. Here is the assembled roof waiting for fabric. The lattice may be added later, but the fabric should be added at this point.

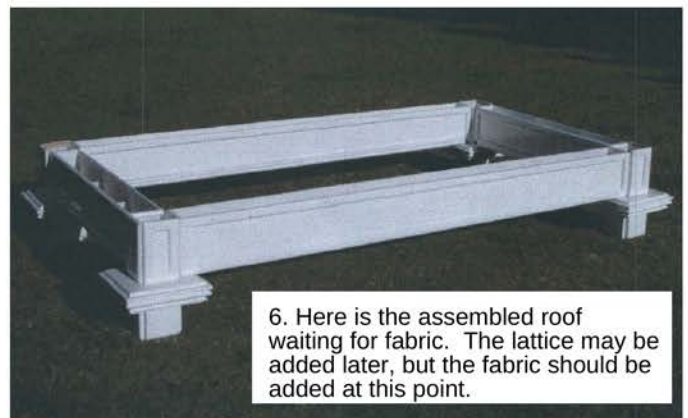


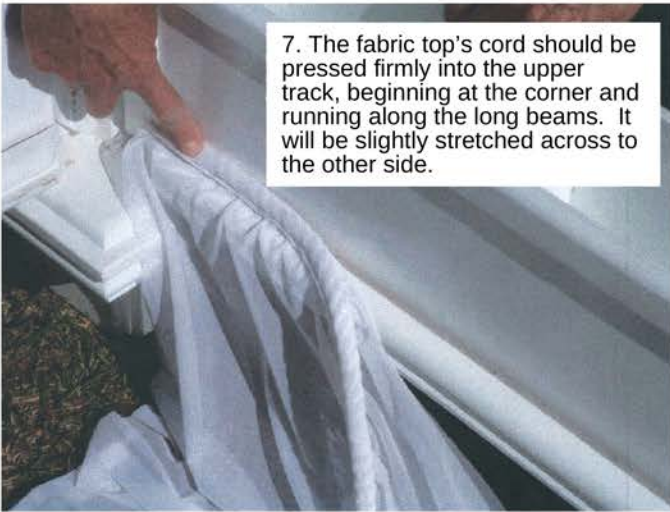

7. The fabric top's cord should be pressed firmly into the upper track, beginning at the corner and running along the long beams. It will be slightly stretched across to the other side.



8. Here the 7' posts have been placed close to the corners. Once end of the roof will be lifted as the respective posts are put underneath. The bottom of each interlock will fit into the top of the post.

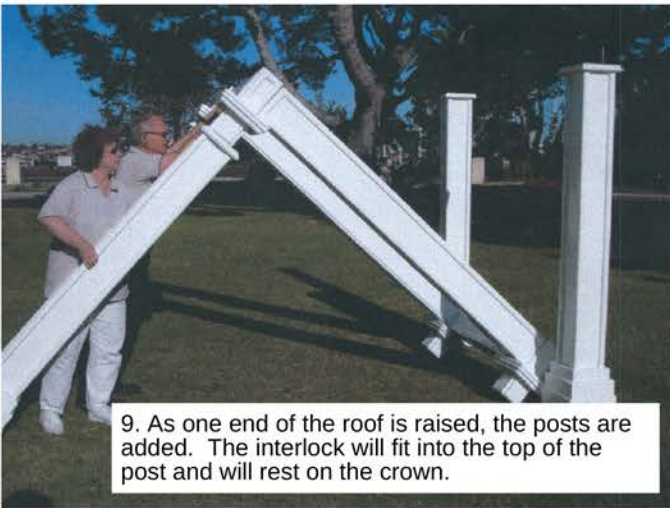

9. As one end of the roof is raised, the posts are added. The interlock will fit into the top of the post and will rest on the crown.



10. Here it waits for the other posts to be added.



11. The remaining posts are added by lifting the other side with a pushing motion, tilting the unit back on the first set of posts.